



Illustrated Parts List Model Series 286700

TYPE NUMBERS 0102 through 4529.


TABLE OF CONTENTS


Air Cleaner 4
Alternator 8
Blower Housing/Shrouds 7
Cams 2
Carburetor
Carburetor Overhaul Kit 3
Controls
Crankcase Cover/Sump 2
Crankshaft 2
Cylinder
Electric Starter
Engine Gasket Set2
Flywheel 6
Fuel Tank
Governor Spring5
lgnition
Muffler 4
Lubrication 2
Piston/Rings/Connecting Rod 2
Rewind Starter 6
Valve Gasket Set 2




PRINTED IN U.S.A.


COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

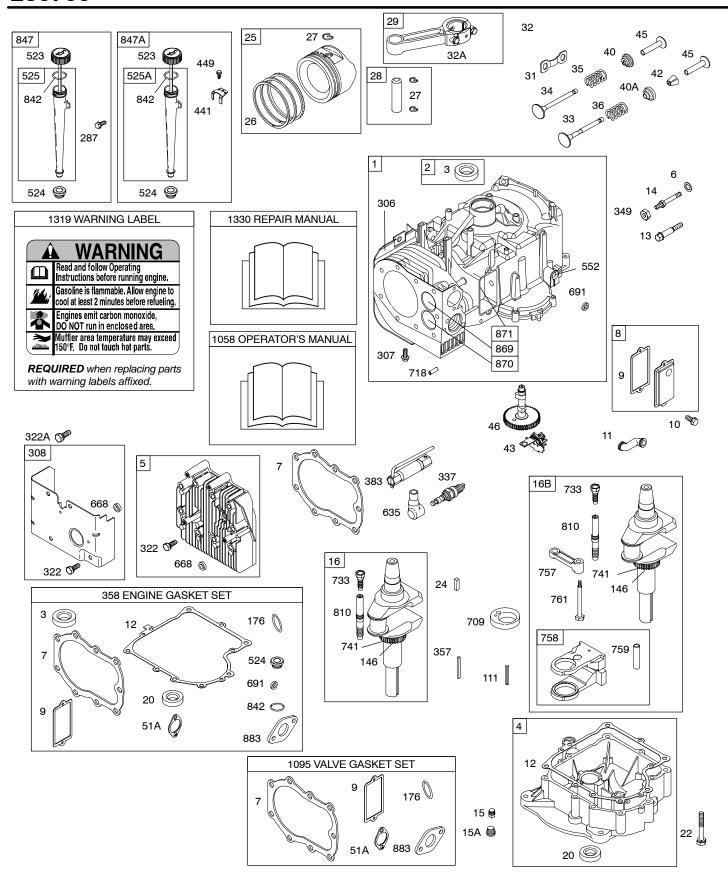


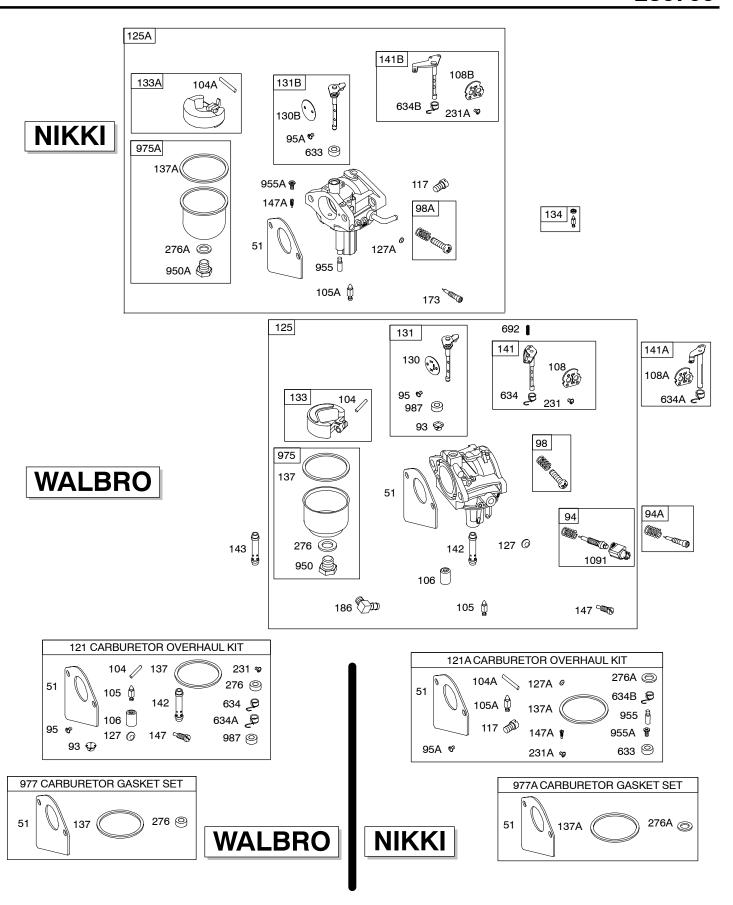



2247-3

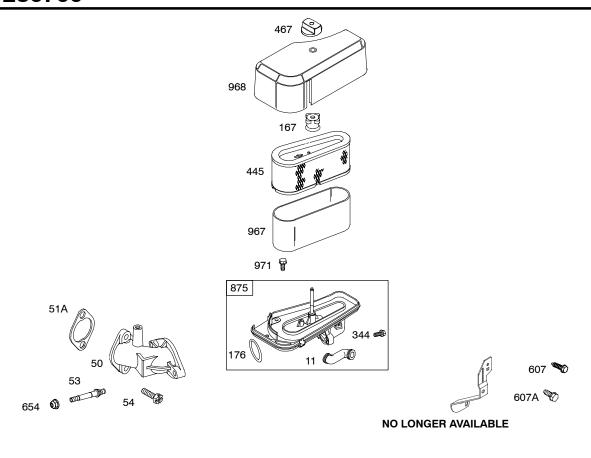

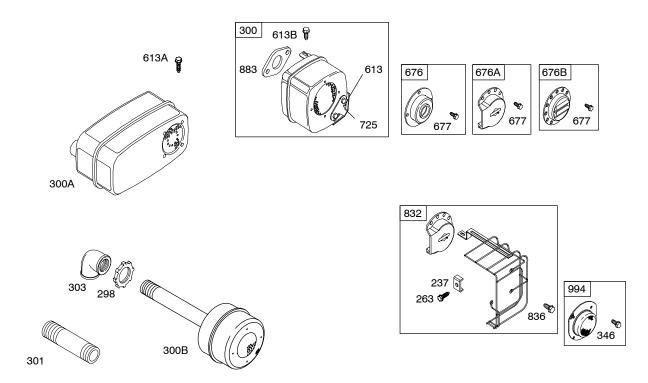


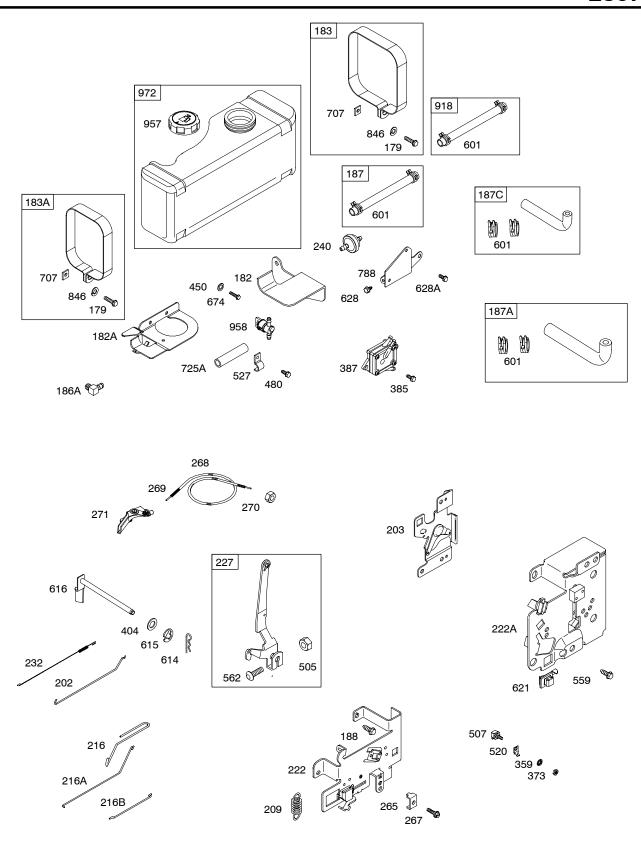


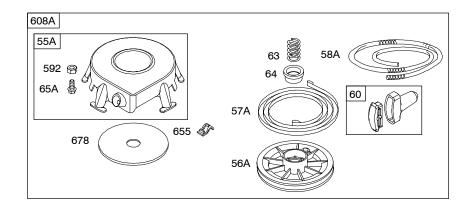







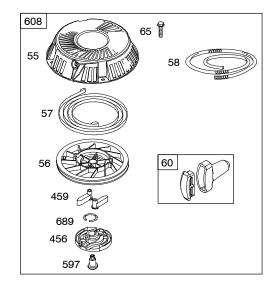











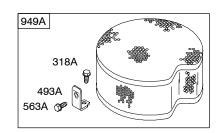


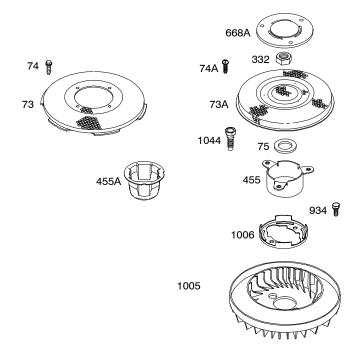


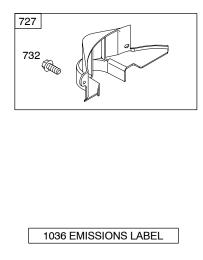


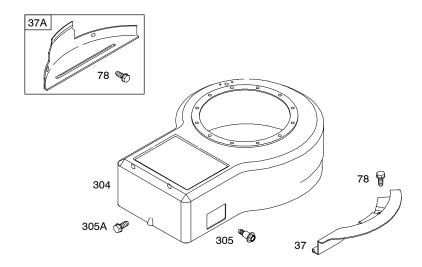


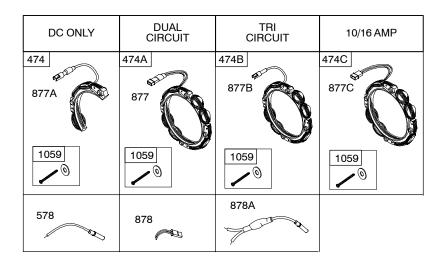


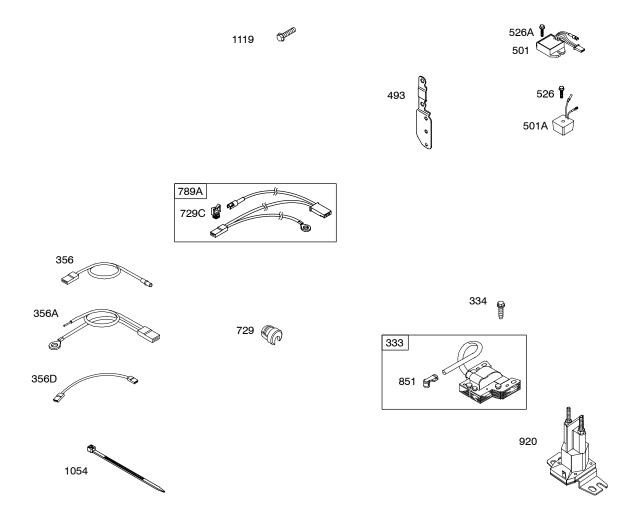

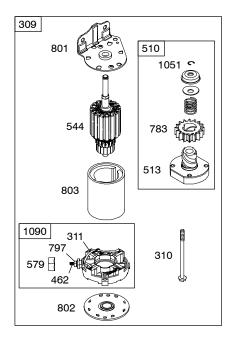

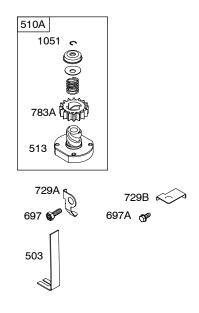



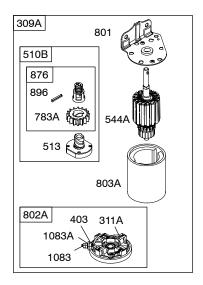

NOTE: For Replacement Starter Motor, See Reference 309.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1 2		Cylinder Assembly Kit-Bushing/Seal (Magneto Side)	23	693557	Flywheel (Steel Ring Gear)	26	696403	Ring Set (Standard) (Used After Code Date
3	391086S				693556 Flywheel (Steel Ring Gear)			01060600). 696405 Ring Set
4	494238	Sump-Engine			Used on Type No(s).			(.020" Oversize)
5	494240	Head-Cylinder			0111, 0116, 0121,			(Used After Code Date
6	691261	Washer			0126, 0127, 0129,			01060600).
_	0740660	(Cylinder Head)			0142, 0145, 0149,			Note
7		Gasket-Cylinder Head Breather Assembly			0157, 0160, 0161,			499996 Ring Set (Standard)
	493733	Note			0163, 0170, 0172,			(Used Before Code
		495734 Breather			0173, 0174, 0175,			Date 01060700).
		Assembly			0176, 0179, 0182,			392331 Ring Set
		Used on Type No(s).			0185, 0414, 0416,			(Standard, Chrome)
		0137, 0153, 0155,			0417, 0422, 0424,			(Used Before Code
		0166, 0184, 0190,			0425, 0442, 0443,			Date 01060700).
		0416, 0425, 0450, 1137, 1184, 1190,			0450, 0455, 1021, 1143, 1160, 1172,			498998 Ring Set (.020" Oversize)
		1206, 1425, 4020,			1182, 1185, 1205,			(Used Before Code
		4520.			1424, 1425, 4020,			Date 01060700).
9		Gasket-Breather			4021, 4030, 4031,			,
10	691666				4515, 4516 4520,			
	600050	(Breather Assembly)			4521.			
11 12		Tube-Breather Gasket-Crankcase	23B	693555	Flywheel			
12	092220	(.015" Thick)			(Rewind Start Engine)			
		(Standard)	24		Key-Flywheel			
		Note	25	696397	Piston Assembly			
		★692406 Gasket-			(Standard)			
		Crankcase			(Used After Code Date 01060600).			
		(.005" Thick)			696399 Piston			
		★692405 Gasket– Crankcase			Assembly			
		(.009" Thick)			(.020" Oversize)			
13	690904	,			(Used After Code Date			
		(Cylinder Head)			01060600).			
14	691690				696400 Piston			
		(Cylinder Head)			Assembly			
		(Used in Positions 5 And 6)			(.030" Oversize)			
15	690946	Plug-Oil Drain			(Used After Code Date			
15A		Plug-Oil Drain			01060600). Note			
16	693944	Crankshaft			499284 Piston			
		(Used After Code Date			Assembly			
16B	602652	95073100). Crankshaft			(Standard)			
108	033033	(Used Before Code			Used Before Code			
		Date 95080100).			Date 01060700).			
20	291675S				499292 Piston			
		(PTO Side)			Assembly			
22	692125				(.020" Oversize)			
		(Crankcase			(Used Before Code			
		Cover/Sump)			Date 01060700).			
		t Deference 259				l stor Cookst		

Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121

								200700
REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
27	691299	Lock-Piston Pin	40	690656	Retainer-Valve	93	690602	Bushing-Throttle Shaft
	001200	(Used After Code Date		00000	(Intake)	94		Kit-Idle Mixture
		95101500).	40A	601030	Retainer-Valve	94A		Kit-Idle Mixture
		Note	707	031303	(Exhaust)	95	691636	
		691792 Lock–Piston	42	101553	Keeper-Valve	33	031000	(Throttle Valve)
		Pin	43		Slinger-Governor/Oil	95A	690718	
					Tappet-Valve	954	090718	
		(Used Before Code	45 46		Camshaft	م ا	405900	(Throttle Valve)
28	400210	Date 95101600).	50		Manifold-Intake	98		Kit-Idle Speed Kit-Idle Speed
28	498319	Pin-Piston			Gasket-Intake	98A		
		(Standard)	51			104		Pin-Float Hinge
		(Used After Code Date	51A		Gasket-Intake	104A		Pin-Float Hinge
		95101500).	53	690227		105		Valve-Float Needle
		Note			(Carburetor)	105A		Valve-Float Needle
		299691 Pin–Piston	54	690953		106	690577	Seat-Inlet
		(Standard)			(Intake Manifold)			(Gravity Feed)
		(Used Before Code	55	695130	Housing-Rewind			(Used After Code Date
		Date 95101600).			Starter			92071900).
			55A	393576	Housing-Rewind			Note
		498320 Pin–Piston			Starter			691901 Seat-Inlet
		(.005" Oversize)	56	695129	Pulley-Starter			(Gravity Feed)
		(Used After Code Date	56A		Pulley-Starter			(Used Before Code
		95101500).	57	695131	Spring-Rewind Starter			Date 92072000).
29	494504S	Rod-Connecting	57A		Spring-Rewind Starter			691780 Seat-Inlet
		(Standard)	58	695132	Rope-Starter			(Pump Feed)
		Note			(59" Long)			(Used After Code Date
		495490 Rod-	58A	695002	Rope-Starter			92071900).
		Connecting			(99" Long)	108	690464	Valve-Choke
		(.020" Undersize)			(Cut to			(Manual Choke)
31	222299	Rod Screw Lock			Required Length)	108A	692344	Valve-Choke
32	690356	Screw	60	490652	Grip-Starter Rope			(Choke A Matic)
		(Connecting Rod)	63	690547	Spring-Ratchet	108B	694923	Valve-Choke
		(1 7/8" Long)	64	691920	Adapter-Ratchet	111	691679	Pin-Retainer
32A	690348	Screw			Spring	117	690880	Jet-Main
		(Connecting Rod)	65	697725	Screw			(Standard)
		(1 5/8" Long)			(Rewind Starter)	121	697884	Kit-Carburetor
33	262246S	Valve-Exhaust	65A	690837	Screw			Overhaul
34	262247S	Valve-Intake			(Rewind Starter)			(LMT 696160, 696162
35	691605	Spring-Valve	66	399671	Clutch-Starter			696164, 696166,
		(Intake)	67	394897	Housing-Clutch			697212, 697213,
36	691597	Spring-Valve	68	691604	Ball-Clutch			697214, 697906)
		(Exhaust)	70	691945	Ratchet-Clutch			Note
37	690456	Guard-Flywheel	71	691359	Cover-Ratchet			497481 Kit-Carbureto
37A		Guard-Flywheel	73	691191	Screen-Rotating			Overhaul
		Used on Type No(s).	73A		Screen-Rotating			(LMT 63, 65, 66)
		0131, 0139, 0418,	74	690345				499220 Kit-Carbureton
		1015, 1107, 1122,	' '		(Rotating Screen)			Overhaul
		1139, 4015, 4016,	74A	691655				(LMT 92, 93. 96, 108,
		4515.	'		(Rotating Screen)			111, 162, 165, 169)
		.5101	75	690582	Washer			499231 Kit–Carbureto
			'3	330302	(Flywheel)			Overhaul
			78	690661	` •			(LMT 97, 99, 133, 135,
			'3	330001				136, 166, 168)
								497535 Kit–Carbureton
								Overhaul
								(LMT 1, 2, 3, 7, 37, 77, 157, 161)
								157, 161)

Engine Gasket Set–Reference 358 Carburetor Overhaul Kit–Reference 121

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
121A		Kit-Carburetor			Note	146	692639	Key-Timing
		Overhaul			496519 Nozzle-	147		Jet-Pilot
40-	0004=4	(Nikki Carburetor)			Carburetor			(LMT 1, 2, 3, 4, 5, 7,
125	698171	Carburetor (LMT 696160, 696162,			(Standard) (LMT 63, 65, 66)			37, 38, 39, 40, 41, 77,
		696164, 696166,			497568 Nozzle-	147A	694927	78, 79, 80, 81) Jet-Pilot
		697212, 697213,			Carburetor	165	693148	
		697214, 697906)			(Standard)			(Ring Gear)
		(Gravity Feed) 498027 Carburetor			(LMT 97, 99, 100) 497860 Nozzle-	167		Seal-Air Cleaner Nut
		(Walbro)			Carburetor	173		Valve-Idle Mixture
		(Gravity Feed)			(Standard)	176	091917	Seal-O Ring (Air Cleaner Base)
		499158 Carburetor			(LMT 133, 134, 135,	179	692331	` ,
		(Walbro)			136)			(Fuel Tank Strap)
125A	699831	(Pump Feed) Carburetor			498545 Nozzle- Carburetor	182	690443	Bracket-Fuel Tank
	000001	(Nikki)			(Standard)			(Right Hand)
127	695005	Plug-Welch			(LMT 108, 111)			222980 Bracket-Fuel
		Note			499037 Nozzle-			Tank
		694524 Plug-Welch (LMT 696160, 696162,			Carburetor (Standard)			(Right Hand)
		696164, 696166,			(LMT 162, 165, 169)			Used on Type No(s). 0186.
		697212, 697213,			499039 Nozzle-	182A	692535	Bracket-Fuel Tank
1074	604016	697214, 697906)			Carburetor	102/	552555	(Left Hand)
127A 130		Plug-Welch Valve-Throttle			(Standard) (LMT 166, 167, 168)	183	698459	Strap-Fuel Tank
	333.33	(LMT 111, 169)			691434 Nozzle–	4004	500000	(Right Hand)
130B		Valve-Throttle			Carburetor	183A	692030	Strap-Fuel Tank (Left Hand)
131	790901	Kit-Throttle Shaft			(Standard)	186	692317	Connector-Hose
131B	694909	(LMT 111, 169) Kit-Throttle Shaft			(LMT 92, 93, 94, 96) 691425 Nozzle-	186A	691609	Connector-Hose
133		Float-Carburetor			Caruburetor	187	791766	Line-Fuel
133A		Carburetor Float			(Standard)			(Cut to Required Length)
134	494788	Kit-Needle/Seat (LMT 5, 6)	143	499040	(LMT 5) Nozzle–Carburetor	187A	699332	Line-Fuel
137	281165S	Gasket-Float Bowl	143	499040	(High Altitude)			(Formed)
137A	694920	Gasket-Float Bowl			(LMT 166, 167, 168)			(21" Long)
141	790905	Kit-Choke Shaft			498258 Nozzle-			(Cut to Required Length)
141A	790902	(Manual Choke) Kit-Choke Shaft			Carburetor High Altitude)	187C	791806	Line-Fuel
1716	730302	(Choke A Matic)			(LMT 66, 100, 133,			(Formed)
141B		Kit-Choke Shaft			134, 136)			(Cut to
142	697592	Nozzle-Carburetor			497737 Nozzle-	400	604600	Required Length)
		(Standard) (LMT 696160, 696162,			Carburetor (High Altitude)	188	691693	(Control Bracket)
		696164, 696166,			(LMT 92, 93, 94, 96)	202	691841	Link-Mechanical
		697212, 697213,			497970 Nozzle-			Governor
		697214, 697906)			Carburetor	203	691381	Crank-Bell
					(High Altitude) (LMT 97, 98)			
					497567 Nozzle–			
					Carburetor			
					(High Altitude)			
					(LMT 5)			
						<u></u>		
_		Deference 250		_		otor Cooket		

Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121

								200700
REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
209	691278	Spring-Governor (Platinum)			691798 Spring- Governor	265 267	691024 690804	Clamp-Casing Screw
		Note			(Brown)			(Casing Clamp)
		692208 Spring-			Used on Type No(s).	268	691025	Casing-Control Wire
		Governor			0115, 0120, 0122,			(Cut to
		(Green)			0124, 0136, 0141,			Required Length)
		Used on Type No(s).			0144, 0151, 0152,	269	691026	Wire-Control
		0129, 0137, 0138,			0166, 0173, 0186,			(Cut to
		0146, 0149, 0150,			0413, 0414, 0416,			Required Length)
		0155, 0157, 0159,			0417, 0622, 1021,	270	691027	
		0160, 0161, 0162,			1025, 1026, 1028,			(Control Wire Casing)
		0163, 0164, 0167,			1029, 1122, 1141,	271		Lever-Control
		0169, 0172, 0424,			1152, 1186, 4020,	276		Washer-Sealing
		0425, 1137, 1143,			4021, 4025, 4026,	276A		Washer-Sealing
		1160, 1162, 1172,			4028, 4029, 4520,	287	691002	
		1194, 1425, 4027, 4527.			4521, 4525, 4526, 4529, 4520	298	601000	(Dipstick Tube) Locknut-Muffler/Elbow
					4528, 4529.	300	691874	
		690480 Spring- Governor			690576 Spring- Governor	300A	498984S	
		(Red)			(Gold)	300A	391569S	
		Used on Type No(s).			Used on Type No(s).	301		Pipe-Exhaust
		0102, 0103, 0114,			0118, 0126, 0176,	303		Elbow-Exhaust
		0116, 0119, 0130,			0182, 0187, 0418,	304		Housing-Blower
		0131, 0134, 0140,			0419, 0423, 1182,	004	030000	(Black)
		0147, 0177, 0183,			1187.			(Used After Code Date
		0401, 0403, 0411,	216	691840	Link-Choke			99102400).
		0412, 0420, 0437,	216A		Link-Choke			Used on Type No(s).
		0438, 0439, 0441,	216B		Link-Choke			1029, 1122, 1190,
		0442, 0443, 0450,	222	694042	Bracket-Control			1193, 4515, 4516,
		0452, 0453, 0454,	222A	692002	Bracket-Control			4521, 4528, 4529.
		0455, 0604, 0634,	227	691374	Lever-Governor			Note
		1103, 1107, 1183,			Control			494268 Housing-
		1197, 1198, 1200,	231	691636	Screw			Blower
		1202.			(Choke Valve)			(Red)
		691795 Spring-	231A	690718	Screw			(Used Before Code
		Governor			(Choke Valve)			Date 93071900).
		(Yellow)	232	691842	Spring-Governor Link			690846 Housing-
		Used on Type No(s).	237	690409	Retainer-Muffler			Blower
		0184, 0185, 0422,			Guard			(Black)
		1163, 1184, 1185,	240	298090s	Filter-Fuel			(Used Before Code
		1205, 1206.			(Red)			Date 99102500 and
					Note			After Code Date
					394358s Filter–Fuel		600400	93071800).
			066	604000	(White)	305	692198	
			263	691083		305A	692127	(Blower Housing)
					(Muffler Guard	305A	092127	
					Retainer)			(Blower Housing)
7		t_Reference 358					t Set_Refe	

Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
306 307	698477 691003	Shield-Cylinder Screw	311 311A		Brush Set Brush Set	449	691678	Screw (Oil Fill Bracket)
308		(Cylinder Shield) Cover-Cylinder Head			(3 5/8" Housing Length)	450	690259	Washer (Fuel Tank)
309		Motor-Starter (3 5/8" Housing	318A	691082	- ,	455 455A		Cup-Flywheel Cup-Flywheel
		Length) (Steel Ring Gear Only)	322	692198	(Debris Screen Guard)	456 459	695128	Plate-Pawl Friction Pawl-Ratchet
		Note 693552 Motor–Starter	322A	691681	(Cylinder Head Cover)	462		Washer (Starter Cable)
		(4 3/8" Housing	332	690662	(Cylinder Head Cover)	467 474		Knob-Air Cleaner Alternator
		Length) (Steel Ring Gear Only)			(Flywheel)			(DC Only)
		497595 Motor–Starter (3 5/8" Housing	333 334	492341 691061		474A		Alternator (Dual Circuit)
		Length) 499521 Motor-Starter	337		(Magneto Armature) Plug-Spark	474B		Alternator (Tri Circuit)
		(4 3/8" Housing Length)	344	693675	(Cable Clamp)	474C	696458	Alternator (10/16 Amp)
309A		Motor-Starter (For Replacement	346	690661	(Air Cleaner Base) Screw	480	690664	Screw (Tube Clamp)
		Starter Motor, See Reference 309)	349	691105	(Spark Arrestor) Nut	493	694475	Bracket–Mounting (Regulator)
310	690323	Bolt (Starter Motor)	356	690807	(Cylinder Head Cover) Wire-Stop	493A	692825	Bracket-Mounting (Debris Screen Guard)
		(3 5/8" Housing Length)	356A 356D	398808	Wire-Stop Wire-Stop	501 501A		Regulator Regulator
		Note 691263 Bolt	357 358	691483	Key-Drive Pulley Gasket Set-Engine	503 505		Strap-Starter
		(Starter Motor)	359		Washer	303	091231	(Governor Control Lever)
		(4 3/8" Housing Length)	363		(Ground Terminal) Puller-Flywheel	507		Insulator
			373	691612	(Ground Terminal)	510		Drive-Starter (Steel Ring Gear)
			383 385	89838S 692198		510A	696541	Drive-Starter (Aluminum And Plastic
			387	808656	(Fuel Pump) Pump-Fuel	510B		Ring Gears) Drive-Starter
			403	690288	Washer (End Cap)	513 520		Clutch-Drive Terminal-Ground
			404	691691	Washer (Governor Crank)	523 524		Dipstick Seal-Dipstick Tube
			441 445		Bracket-Oil Fill Filter-Air Cleaner	525 525A		Tube-Dipstick Tube-Dipstick
					Cartridge	526	690326	
						526A	692198	
						527	690394	Clamp-Tube
		:_Reference 358				etor Gaske		

Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
						140.	110.	
544	692034	Armature–Starter	634		Spring/Seal Assembly		000740	(Counterweight)
		(3 5/8" Housing	634A		Spring/Seal Assembly	783	693713	Gear-Pinion
544A	390837	Length) Starter Armature	634B 635		Spring/Seal Assembly Boot-Spark Plug	7004	605700	(Steel Ring Gear Only)
344A	390637	(3 5/8" Housing	654	690958		783A		Gear-Pinion
		Length)	034	090936	(Carburetor)	788 789A		Bracket-Fuel Pump
		Note	655	601734	Anchor-Rewind Spring	769A 797	693167	Harness-Wiring
		490309 Armature–	668	690510	. •	191	093107	(Brush Retainer)
		Starter	668A	691323	•	801	601283	Cap-Drive
		(4 3/8" Housing			(Rotating Screen)	802		Cap-End
		Length)	674	691058		802A		Cap-End
552	491986	Bushing-Governor			(Fuel Tank Bracket)	002/1		(3 5/8" Housing
		Crank	676	396903	Deflector-Muffler			Length)
559	690661	Screw	676A		Deflector-Muffler	803		Housing-Starter
		(Remote Choke Stop)	676B	397630	Deflector-Muffler			(3 5/8" Housing
562	691119	Bolt	677	690661				Length)
		(Governor			(Muffler Deflector)			(Serviced by
		Control Lever)	678		Spacer-Rewind			Reference 309)
563A	690370		689		Spring-Friction			Note
		(Debris Screen Guard)	691		Seal-Governor Shaft			Housing-Starter)
578 570		Wire Assembly	692		Spring-Detent			(4 3/8" Housing
579	691029		695	693109				Length)
592	690800	(Starter Cable)	697	690372	(Ring Gear)			(Serviced by
392	090000	(Rewind Starter)	091	090312	(Drive Cap)	_		Reference 309)
597	691696	,	697A	691058	` ',	803A	398159	Housing-Starter
""	001000	(Pawl Friction Plate)	0077	001000	(Drive Cap)			(3 5/8" Housing
601	791850	Clamp-Hose	707	690279				Length)
607	690703	•			(Fuel Tank Strap)			Note
		(Air Cleaner Brace)	709	262243	Eccentric			494205 Housing-
607A	691693		718	690959	Pin-Locating			Starter (4 3/8" Housing
		(Air Cleaner Brace)	725	690403	Shield-Heat			Length)
608	695058	Starter-Rewind			(Fuel Line)	810	601770	Extension-Crankshaft
		(Used After Code Date	725A	690420	Shield-Heat	832		Guard-Muffler
		99102400).			(Muffler)	836	690367	
608A	390391		726		Gear-Ring			(Muffler Guard)
		(Used Before Code Date 99102500).			(Steel) (See Reference 23	842	691870	Seal-O Ring
613	691416	,			for Service)			(Dipstick Tube)
0.0	031410	(Muffler)	726A	696537	Gear-Ring	846	690371	Washer
613A	691693	` '			(Aluminum)			(Fuel Tank Strap)
		(Muffler)			(Services Plastic Ring	847	496415	Dipstick/Tube
613B	692661	` '			Gear Only)			Assembly
		(Muffler)	727		Cover-Starter Drive	847A	490474	Dipstick/Tube
614		Pin-Cotter	729		Clip-Wire	,	1005555	Assembly
615	93307	Retainer-Governor	729A		Clip-Wire	851		Terminal-Spark Plug
		Shaft	729B		Clip-Wire	869	691802	Seat-Valve
616		Crank-Governor	729C		Clip-Wire	870	601044	(Intake) Seat-Valve
621		Switch-Stop	732	691002		670	091044	
628	690661	(Fuel Pump Bracket)	733	698139	(Starter Drive Cover)	871	261961	(Exhaust) Bushing-Valve Guide
		(13/32" Long)	/33	050139	(Crankshaft Extension)	0,1	201301	(Exhaust)
628A	692198	ν σ,	741	691284	Gear-Timing			Note
320A	332 I 30	(Fuel Pump Bracket)	757		Link-Counterweight			231218 Bushing-
		(2 5/16" Long)	757 758		Counterweight			Valve Guide
633	695414	Seal-Choke/Throttle	759		Pin-Counterweight			(Intake)
		Shaft	761	691096	•			(Brass)
L			<u> </u>					` '

Engine Gasket Set–Reference 358 Carburetor Overhaul Kit–Reference 121

DEE	DADT		DEE			DEE	DADT	T
REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
875	696129	Base-Air Cleaner	971	691108	Screw	1036		Label-Emissions
876	696539	Kit-Pinion Spring			(Air Cleaner Base			(Available from a
877	393456	Wire/Connector-			to Carburetor)			Briggs and Stratton
		Alternator			(Used After Code Date			Authorized Dealer)
877A	393814	Wire/Connector-			98091300).	1044	698139	Screw
		Alternator			Note			(Flywheel)
877B	393537	Wire/Connector-			692198 Screw	1051		Ring-Retaining
		Alternator			(Air Cleaner Base	1054		Tie-Cable
877C	399916	Wire/Connector-			to Carburetor)	1058		Operator's Manual
		Alternator			(Used Before Code	1059	698516	Kit-Screw/Washer
878		Harness-Alternator			Date 98091400.)			(Alternator)
878A		Harness-Alternator	972	390225	Tank-Fuel	1083	691626	
883		Gasket-Exhaust			(3 Quart)			(End Cap
896		Pin-Drive Retainer	975		Bowl-Float	1083A	690958	
918	393815	Hose-Vacuum	975A		Bowl-Float			(End Cap)
		(Cylinder To	977		Gasket Set-Carburetor	4000	604000	(Serrated)
		Impulse Pump)	977A		Gasket Set-Carburetor	1090		Retainer-Brush
		(Cut to	987 994		Seal-Throttle Shaft	1091 1095		Cap-Limiter Gasket Set-Valve
020	601656	Required Length) Solenoid–Starter			Arrestor-Spark		691183	
920 930		Guard-Rewind	1005	794436	Fan-Flywheel (Used After Code Date	1119	091103	(Alternator)
934	691058				99102400).	1319	794467	Warning-Label
334	091036	(Fan Retainer)			Note	1330		Repair Manual
949A	397530	Guard-Debris Screen			691905 Fan-Flywheel	1550	210902	riepaii iviariuai
950		Screw-Float Bowl			(Used Before Code			
950A		Screw-Float Bowl			Date 99102500).			
955		Plug-Carburetor	1006	690452	Retainer-Fan			
		(Idle Chamber)			riotalior i ali			
955A	694921	Plug-Carburetor						
		(Pilot Jet)						
957	493988s	Cap-Fuel Tank						
958		Valve-Fuel Shut Off						
967	272403s	Filter-Pre Cleaner						
968	692916	Cover-Air Cleaner						
	Cooket Co					otor Cooket		

Engine Gasket Set-Reference 358 Carburetor Overhaul Kit-Reference 121

2247-16